



INTEGRATED CASH DRAWERS  
UNDER-THE-COUNTER CASH DRAWERS  
TABLE TOP CASH DRAWERS

INSTRUCTIONS  
FOR CASH DRAWERS WITH PRESSURE LOCKS

Copyright – 2002 Mogler-Kassen GmbH, Rappenu  
Printed in Germany  
All rights reserved

This document may not be reproduced in any form, either in part or in whole, translated into other languages  
or distributed to third-parties without the prior written consent of Mogler-Kassen GmbH.

**Mogler-Kassen GmbH**  
**Obere Mühle 17**  
**D-74906 Bad Rappenu-Bonfeld, Germany**  
**Phone +49 (0) 70 66 99 44-10**  
**Fax +49 (0) 70 66 99 44-11**

**Internet: <http://www.mogler.de>**  
**E-mail: [technik@mogler.de](mailto:technik@mogler.de)**

Edition 1.0  
03/2002

# Table of Contents

<b>Introduction</b>	<b>I</b>
General	I
Guarantee	I
Installation	2
Opening the Cash Drawer for the First Time	2
Removing the Cash Drawer	3
Table Top/Under-The-Counter Cash Drawer	3
Reduced-Depth Cash Drawers	3
Installing the Cash Drawer	4
Under-The-Counter Cash Drawer	4
Reduced-Depth Cash Drawers with Mounting Frames (Under-The-Counter Model)	4
Inserting the Cash Drawer	5
Table Top/Under-The-Counter Cash Drawer	5
Reduced-Depth Cash Drawers	5

<b>Operation</b>	<b>6</b>
Opening the Cash Drawer . . . . .	6
Configuring the Distance that the Cash Drawer Extends . . . . .	6
Cylinder Lock . . . . .	7
Models With Lockable Drawer Inserts (DI) . . . . .	7
 <b>Maintenance</b>	 <b>8</b>
 <b>Trouble Shooting</b>	 <b>9</b>
The drawer will not slid in. . . . .	9
After being used in the housing . . . . .	9
After installation in the housing . . . . .	9
Cash Drawer With Insert . . . . .	9
Other Errors . . . . .	10
Other . . . . .	10
The key is broken. . . . .	10
The drawer is difficult to unlock. . . . .	10
Drawer will not open after pressing on the front panel. . . . .	10
 <b>Appendix</b>	 <b>11</b>
Replacement Parts List . . . . .	11
Accessories . . . . .	12

# I Introduction

## I.1 General

- Please read the instructions **before** installing or using the cash drawer for the first time.
- Kindly follow the maintenance instructions (see Section 3).
- Lock the cash drawer with the cylinder lock before leaving it unattended.

## I.2 Guarantee

All Mogler cash drawers are covered by a 12 month guarantee.

Please note that improper handling or failure to observe the instructions will render warranty claims void. Mogler is not liable for damages or losses due to improper operation.

 
### I.3 Installation

The cash drawer is locked upon delivery.

- Before assembling any cash drawer type, you must first remove the drawer (see Section I.3.2).


#### I.3.1 Opening the Cash Drawer for the First Time

The cash drawer key is located in the envelope with the instruction manual.

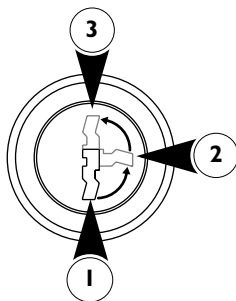

- Unlock the cylinder lock.
  - Key position **1** = drawer locked
  - Key position **2** = drawer unlocked (operating state)
  - Key position **3** = not used
- Open the drawer by pressing lightly on the front panel.


### I.3.2 Removing the Cash Drawer

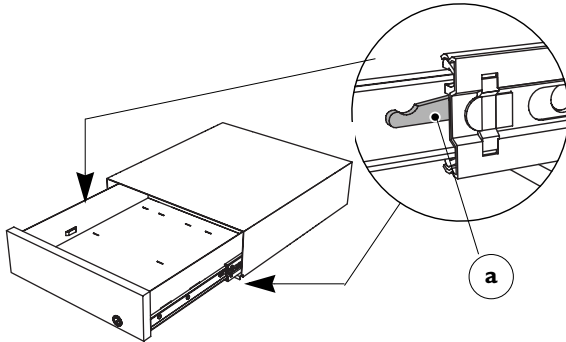 

The cash drawer with pressure lock is delivered as a table top unit with four rubber feet or as an under-the-counter unit with four mounting holes.

#### Table Top/Under-The-Counter Cash Drawer

 - Pull the drawer out as far as is possible.
- Press the plastic lever **a** as far as it will go (down on the right and up on the left side of the drawer) and then pull the drawer out.
- The drawer can now be removed from the rails.

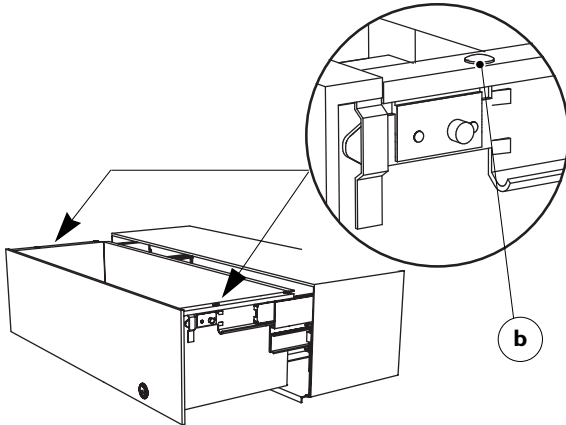

#### Reduced-Depth Cash Drawers

 
- Pull the drawer out as far as it will go.
- Pull the drawer gently to bypass the incorporated spring blocking mechanism.
- Now pull the drawer out as far as it will go again.
- Press both lock knobs **(b)** on the top edges of the drawer and pull the drawer towards you.

#### Telescopic Rails Without Plastic Lever (a)

- Pull the drawer out as far as it will go.
- Free the drawer from the rails with a firm tug.


## Cash Drawers With Pressure Locks

### I.3.3 Installing the Cash Drawer

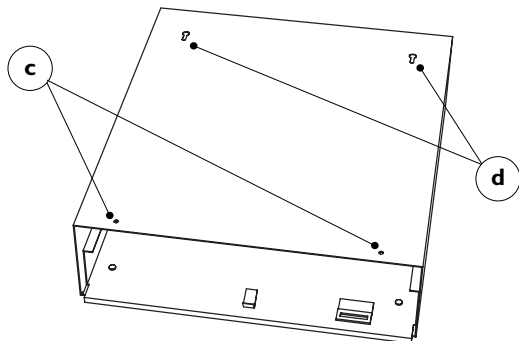

#### Under-The-Counter Cash Drawer

 - ! To install the cash drawer unit, use screws with heads that are as flat as possible to ensure smooth movement of the sliding drawer.
- Fasten the under-the-counter cash drawer unit to the base plate using drill holes **c** and keyholes **d**.

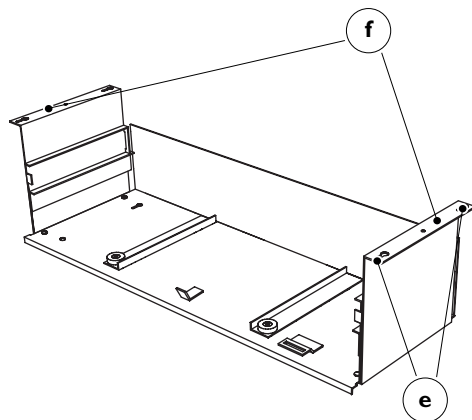


#### Reduced-Depth Cash Drawers with Mounting Frames (Under-The-Counter Model)

- Mount the cash drawer unit to the base plate using keyholes **e** on mounting frame **f**.

Optional: Table top cash drawer with mounting bracket.


 
## I.3.4 Inserting the Cash Drawer

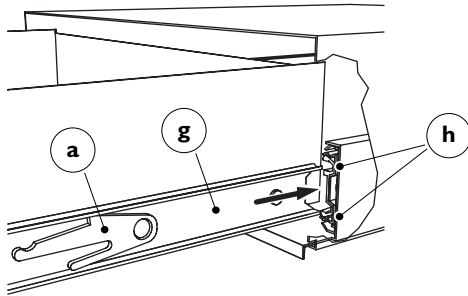


! Never apply force to close a cash drawer.

### Table Top/Under-The-Counter Cash Drawer

 - Push the telescopic rails into the cash drawer housing as far as they will go.
- Insert guide rails **g** on the side of the drawer into openings **h** on the telescopic rails.

! Be careful not to twist or tilt the drawer.

- Close the cash drawer. The rails are automatically blocked.

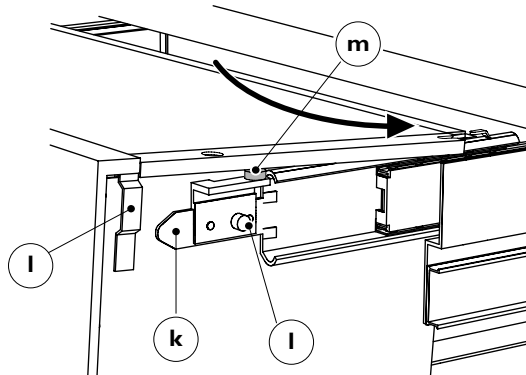

### Reduced-Depth Cash Drawers

- Pull the guide rails out as far as they will go.
- Place the drawer on the rails.
- Hold the rails using knobs **i** and insert tongue **k** into the supports labelled **l**.  
→ Lock knobs **m** should automatically latch into the holes in the drawer.
- Push the drawer gently to overcome the incorporated spring blocking mechanism.  
→ Close the cash drawer.

### Telescopic Rails Without Plastic Lever (a)

- Push the telescopic rails into the cash drawer housing as far as they will go.
- Guide the drawer onto the rails with a firm push.

# 2 Operation

## 2.1 Opening the Cash Drawer

 
The procedure for opening the cash drawer is identical for all models.

- Press the front panel.
  - The drawer opens.


## 2.2 Configuring the Distance that the Cash Drawer Extends

The distance the cash drawer extends (travel) is variable on all models:

- Attach stop **n** to the bottom of the drawer.
  - Inserting the stop in the front position **o** = shortest drawer travel when open
  - Inserting the stop in the rear position **p** = longest extension of drawer when open

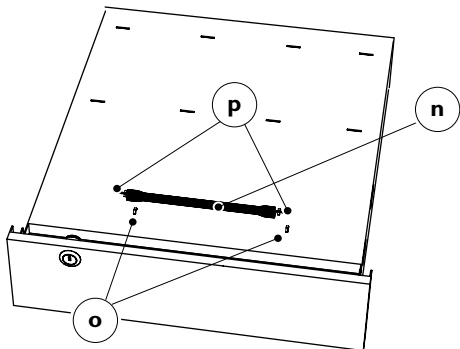

## 2.3 Cylinder Lock

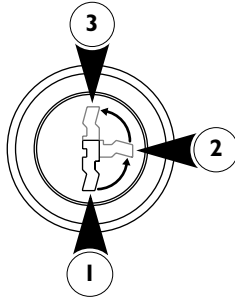 


All cash drawer models can be locked or unlocked using a cylinder lock:

- Key position **1** = drawer locked
- Key position **2** = drawer unlocked (operating state)
- Key position **3** = not used

**!** Remove the key after unlocking the cash drawer. This will prevent the cash drawer from becoming locked if the key is accidentally turned and avoid accidental breakage of the key.

**!** Never leave a key in the cash drawer!

## 2.4 Models With Lockable Drawer Inserts (DI)

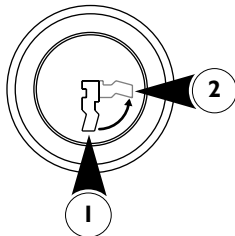 

Always remove the cover before placing the insert into the cash drawer:

- Unlock the lock on the cover of the insert.
  - Vertical key position **1** = cover locked
  - Horizontal key position **2** = cover unlocked
- Raise the cover level to clear the lock and then remove it.
- Place the insert into the drawer.
- With certain models, the cover can be stored in a special storage area under the drawer during operation.

- To close the insert cover again, remove the insert from the cash drawer.
- Ensure that the cover is resting on the edge of the insert before shutting it.
- Turn the lock.

# 3 Maintenance

! Keep the guide rails and ball bearings clean.

 
If dirt should hinder smooth operation of the cash drawer:

- Remove the cash drawer (see Section 1.3.2).
- Clean the telescopic rails.
- Coat the rails and ball bearings with a non-hardening ball bearing grease.

# 4

## Trouble Shooting

### 4.1 The drawer will not slid in

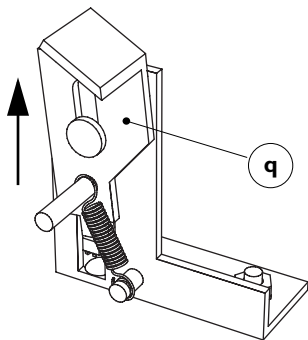

#### After being used in the housing

Possible cause: The drawer has been twisted or tilted

- Remove the drawer.
- Insert the drawer again.

#### After installation in the housing

Possible cause: The closing mechanism lever on the bottom of the drawer is incorrectly positioned.

- Push the lever **q** upwards until it latches.
- Insert the drawer again.

#### Cash Drawer With Insert

Possible cause: The cover is not placed correctly on the drawer insert.

If you want to store a covered insert in the cash drawer, you must make sure that the cover is correctly placed on the insert.

- Place the cover on the insert again.

Possible cause: Insert was not placed in the drawer correctly.

- Remove the drawer insert.
- Check that there are no objects below the drawer insert.

### Other Errors

Possible cause: Lock is closed.

- Ensure that the lock is in the unlocked position.

Possible cause: Objects are blocking the drawer.

- Make sure that there are no objects behind the cash drawer.

Possible cause: The guide rails or ball bearings are dirty.

- See Maintenance (Section 3)

## 4.2 Other

### The key is broken.

- Please contact your dealer.

### The drawer is difficult to unlock.

- If the drawer is difficult to open with the key, press on the front panel while turning the key.

### Drawer will not open after pressing on the front panel.

- Make certain that the lock is in the unlocked position.

Possible cause: Broken/overstretched drawer stop.


- Turn the key in the lock to the open position.
- Using the key, slowly remove the drawer.
- Install a new stop spring (see Section 2.2).

# 5 Appendix

## 5.1 Replacement Parts List

When ordering replacement parts, please specify the item number, till or drawer type and the serial number.

Fig.	Item No.	Description
1	900-001	Cylinder Lock with Lock Spring
2	900-003	Stop Spring
3	900-020	Pressure Lock Bearing
4	900-021	Pressure Lock Tension Spring
5	900-022	Pressure Lock Block Mechanism
6	900-009	Rail Set (Pair) Guide Rails and Telescopic Rails

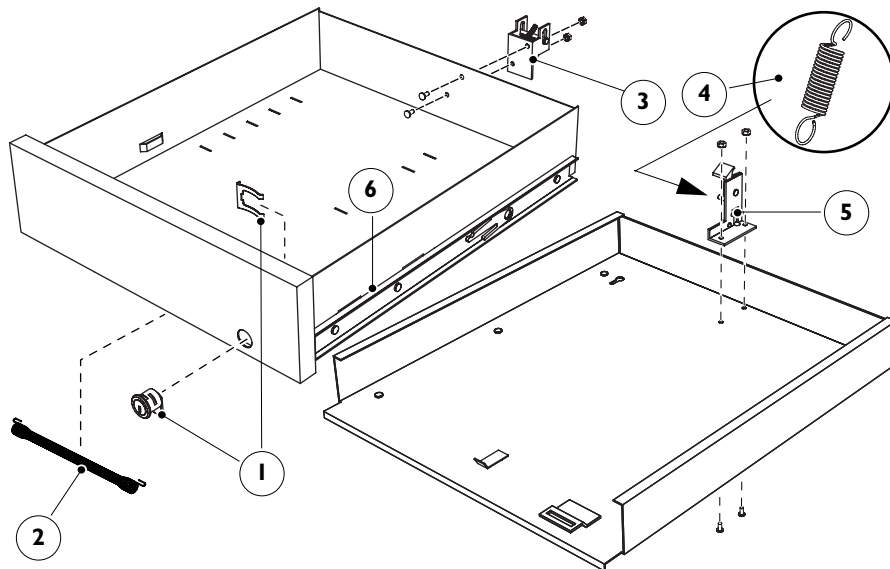 

### 5.2 Accessories

Consult our catalogue for other accessories such as drawer equipment and storage compartments for coins and banknotes.

To ensure optimum, trouble free operation of your product, we recommend that you only use the drawer inserts provided by Mogler GmbH.



**Notes:**

## Cash Drawers With Pressure Locks

Notes:



We would be happy to advise you. Give us a call!

Mogler-Kassen GmbH  
Obere Mühle 17  
D-74906 Bad Rappenau-Bonfeld, Germany  
Phone +49 (0) 70 66 99 44-10  
Fax +49 (0) 70 66 99 44-11

Internet: <http://www.mogler.de>  
E-mail: [technik@mogler.de](mailto:technik@mogler.de)

Printed in Germany  
03/2002